

ALUM-3-CONV

⚠ WARNING	⚠ ADVERTENCIAS
Lock Handle Release before using as hand cart Keep both hands on handles when converting	Bloquee la liberación del mango antes de usarlo como carro de mano Mantenga ambas manos en las asas antes de convertirlas

804

⚠ WARNING	⚠ ADVERTENCIA	⚠ AVERTISSEMENT
Do not operate or move with unstable loads DO NOT LOAD beyond rated capacity DISTRIBUTE LOAD EVENLY DO NOT sit or ride	No use a mueva con cargas inestables No cargue mas de la capacidad tasada DISTRIBUYA LA CARGA A NIVEL NO SE SIENTE o vaya en el carro	Ne pas utiliser avec une charge instable NE PAS CHARGER au-delà du débit nominale DISTRIBUER la charge régulièrement NE PAS VOUS ASSEoir OU VOUS PROMENER sur le chariot

658

HANDLE RELEASE	ASA DE LIBERACION
-------------------	----------------------

805



ALUM-3-CONV Configurations and Capacities



Hand Truck Capacities
Load plate only = 500 lb. (227.3 kg)
Load extension = 200 lb. (90.9 kg)



Inclined Dolly Capacities
Load plate only = 600 lb. (272.7 kg)
Load extension = 250 lb. (113.6 kg)



Dolly Capacities
Load plate only = 750 lb. (340.9 kg)
Load extension = 500 lb. (227.3 kg)

1125

Label 1072 is to be applied to the outside of individual packaging

⚠ WARNING: Reproductive Harm - www.P65Warnings.ca.gov.	⚠ ADVERTENCIA: Daño Reproductivo - www.P65Warnings.ca.gov.
⚠ WARNING: Cancer - www.P65Warnings.ca.gov.	⚠ ADVERTENCIA: Cáncer - www.P65Warnings.ca.gov.

3 POSITION HAND TRUCK

4/28/2020