



VESTIL MANUFACTURING CORP.

2999 North Wayne Street, P.O. Box 507, Angola, IN 46703

Telephone: (260) 665-7586 -or- Toll Free (800) 348-0868

Fax: (260) 665-1339

www.vestilmfg.com e-mail: info@vestil.com

ADJUSTABLE WORK-MATE STAND WITH ERGO MATTING AHT SERIES



Receiving instructions:

After delivery, IMMEDIATELY remove the packaging from the product in a manner that preserves the packaging and maintains the orientation of the product in the packaging; then inspect the product closely to determine whether it sustained damage during transport. **If damage is discovered during the inspection, immediately record a complete description of the damage on the bill of lading.** If the product is undamaged, discard the packaging.

NOTES:

1) Compliance with laws, regulations, codes, and non-voluntary standards enforced in the location where the product is *used* is exclusively the responsibility of the owner/end-user.

2) VESTIL is **not liable** for any injury or property damage that occurs as a consequence of failing to apply either: a) the instructions in this manual; or b) information provided on labels affixed to the product. Neither is Vestil responsible for *any* consequential damages sustained as a result of failing to exercise sound judgment while assembling, installing, using or maintaining this product.

Table of Contents

Signal Words.....	2
Safety Guidelines.....	2
Specifications.....	3
Platform height adjustment & Labeling diagram.....	4
Limited warranty.....	5

Signal Words:

This manual uses SIGNAL WORDS to indicate the likelihood of personal injuries, as well as the probable seriousness of those injuries, if the product is misused in the ways described. Other signal words call attention to uses of the product likely cause property damage.

The signal words used appear below along with the meaning of each word:



Identifies a hazardous situation which, if not avoided, **WILL** result in **DEATH** or **SERIOUS INJURY**. Use of this signal word is limited to the most extreme situations.



Identifies a hazardous situation which, if not avoided, **COULD** result in **DEATH** or **SERIOUS INJURY**.



Indicates a hazardous situation which, if not avoided, **COULD** result in **MINOR** or **MODERATE** injury.



Identifies practices likely to result in product/property damage, such as operation that might damage the product.

Each person who assembles, installs, uses, or maintains this product should read the entire manual **and fully understand the directions in advance**. **If after reading the manual you do not understand an instruction, ask your supervisor or employer for clarification, because failure to adhere to the directions in this manual might result in serious personal injury.**

Safety Guidelines:

Vestil diligently strives to identify foreseeable hazards associated with the use of its products. However, material handling is inherently dangerous and no manual can address every conceivable risk. The end-user ultimately is responsible for exercising sound judgment at all times.



Electrocution might result if any part of the product contacts electrified wires. Reduce the likelihood of electrocution by applying **common sense**:

- DO NOT *contact* electrified wires with any part of this device, your body, or clothing.
- DO NOT use or store the product where contact with electrified wires is likely.
- Always inspect the usage area before using the product & implement precautions that account for conditions.



If this product is used improperly or carelessly, the operator and/or bystanders might sustain serious personal injuries or even be killed. To reduce the likelihood of injury:

- **Read and understand the entire manual before assembling, using or servicing the product.** Read the manual to refresh your understanding of proper use and maintenance procedures.
- DO NOT attempt to resolve any problem(s) with the product unless you are both authorized to do so and *certain* that it will be safe to use afterwards.
- DO NOT modify the product in any way UNLESS you first obtain written approval from Vestil. Unauthorized modifications automatically void the Limited Warranty and might make the product unsafe to use.
- DO NOT exceed the maximum rated load (see Label 287 in “Labeling diagram” on page 4).
- DO NOT use the platform unless it is level. Adjust the legs as needed to level the platform. (See “Platform height adjustment” on p. 4).
- DO NOT use the platform on uneven ground
- Inspect the product before each use.
 - A. DO NOT use this product if the inspection reveals structural damage. Examples of structural damage include, but are not limited to, the following: 1) Cracked, broken or significantly deformed load-bearing members; 2) cracked welds; 3) corrosion; 4) severe wear. Replace each part that fails to pass an inspection, and DO NOT use the product until it is fully restored to normal condition.
 - B. DO NOT use the product if any unusual noise or movement is observed. Remove the unit from service and notify your supervisor & maintenance personnel about the issue.
- DO NOT use this device UNLESS all product labels (see “Labeling Diagram” on p. 4) are readable and undamaged.



- Proper use, maintenance, and storage are essential for this product to function properly.
- Always use this product in accordance with the instructions in this manual.
 - Keep the product clean & dry.
 - Periodically oil the threads of each leg.

Specifications:

Adjustable Work-Mate Stands (Ergo-Matting Deck)					
Model	Deck Size (WxL)	Lowered Height	Raised Height	Capacity (lb)	Net Wt. (lb)
Steel / Stainless Steel Models					
AHT-L-1924 / AHT-L-1924-SS	19" X 24"	6-3/4"	8-3/4"	500	31
AHT-L-2424 / AHT-L-2424-SS	24" X 24"	6-3/4"	8-3/4"	500	36
AHT-L-1936 / AHT-L-193-SS	19" X 36"	6-3/4"	8-3/4"	500	42
AHT-L-2436 / AHT-L-2436-SS	24" X 36"	6-3/4"	8-3/4"	500	50
AHT-L-1948 / AHT-L-1948-SS	19" X 48"	6-3/4"	8-3/4"	500	53
AHT-L-2448 / AHT-L-2448-SS	24" X 48"	6-3/4"	8-3/4"	500	64
AHT-L-2460 / AHT-L-2460-SS	24" X 60"	6-3/4"	8-3/4"	500	81
AHT-L-2472 / AHT-L-2472-SS	24" X 72"	6-3/4"	8-3/4"	500	95
AHT-L-2496 / AHT-L-2496-SS	24" X 96"	6-3/4"	8-3/4"	500	122
AHT-H-1924 / AHT-L-1924-SS	19" X 24"	10-1/2"	16-1/2"	500	36
AHT-H-2424 / AHT-H-2424-SS	24" X 24"	10-1/2"	16-1/2"	500	42
AHT-H-1936 / AHT-H-1936-SS	19" X 36"	10-1/2"	16-1/2"	500	47
AHT-H-2436 / AHT-H-2436-SS	24" X 36"	10-1/2"	16-1/2"	500	56
AHT-H-1948 / AHT-H-1948-SS	19" X 48"	10-1/2"	16-1/2"	500	58
AHT-H-2448 / AHT-H-2448-SS	24" X 48"	10-1/2"	16-1/2"	500	70
AHT-H-2460 / AHT-H-2460-SS	24" X 60"	10-1/2"	16-1/2"	500	89
AHT-H-2472 / AHT-H-2472-SS	24" X 72"	10-1/2"	16-1/2"	500	103
AHT-H-2496 / AHT-H-2496-SS	24" X 96"	10-1/2"	16-1/2"	500	130
Aluminum Models					
AHT-L-1924-A	19" X 24"	5-3/4"	7-3/4"	500	30
AHT-L-2424-A	24" X 24"	5-3/4"	7-3/4"	500	35
AHT-L-1936-A	19" X 36"	5-3/4"	7-3/4"	500	40
AHT-L-2436-A	24" X 36"	5-3/4"	7-3/4"	500	47
AHT-L-1948-A	19" X 48"	5-3/4"	7-3/4"	500	52
AHT-L-2448-A	24" X 48"	5-3/4"	7-3/4"	500	60
AHT-L-2460-A	24" X 60"	5-3/4"	7-3/4"	500	81
AHT-L-2472-A	24" X 72"	5-3/4"	7-3/4"	500	89
AHT-L-2496-A	24" X 96"	5-3/4"	7-3/4"	500	113
AHT-H-1924-A	19" X 24"	9-1/2"	15-1/2"	500	36
AHT-H-2424-A	24" X 24"	9-1/2"	15-1/2"	500	41
AHT-H-1936-A	19" X 36"	9-1/2"	15-1/2"	500	45
AHT-H-2436-A	24" X 36"	9-1/2"	15-1/2"	500	53
AHT-H-1948-A	19" X 48"	9-1/2"	15-1/2"	500	55
AHT-H-2448-A	24" X 48"	9-1/2"	15-1/2"	500	65
AHT-H-2460-A	24" X 60"	9-1/2"	15-1/2"	500	85
AHT-H-2472-A	24" X 72"	9-1/2"	15-1/2"	500	97
AHT-H-2496-A	24" X 96"	9-1/2"	15-1/2"	500	121

Platform height adjustment:

Each leg is independently adjustable. To extend the legs and increase platform height, turn the legs counterclockwise. To reduce platform height, turn the legs clockwise. After adjusting the legs, set the platform on its feet. Check platform levelness and adjust the legs as needed to make the platform level. Do not use the platform unless it is level.




Turn leg counterclockwise to increase platform height

Labeling diagram:

The product should always be labeled as shown in the diagram (below). Replace a label if it is missing or not easily readable, for instance as a result of fading or damage.

⚠ WARNING	⚠ ADVERTENCIA
Stand must be level and stable Do not load beyond rated capacity Center and Distribute load evenly	El soporte debe ser el nivel y estable No cargue más allá de la capacidad calculada El centro y Distribuye laod regularmente

213

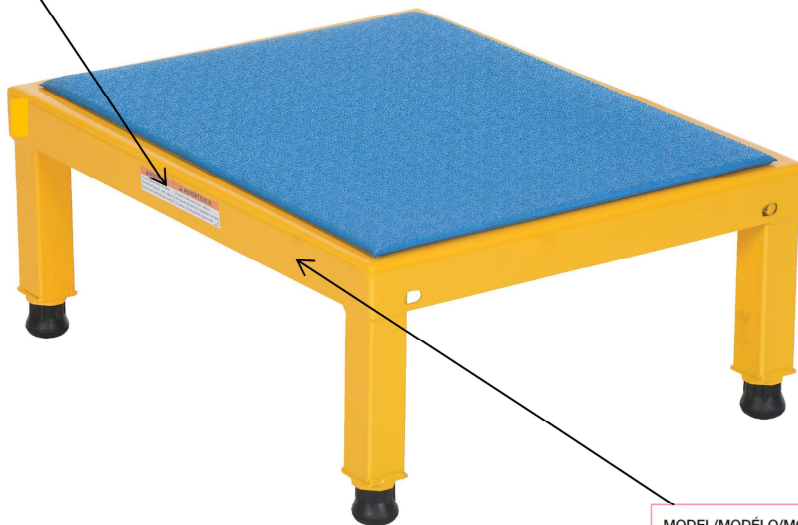

MODEL/MODÉLO/MODÈLE _____
 STATIC CAPACITY (evenly distributed) _____
 LA CAPACIDAD CONSTANTE (distribuida uniformemente) _____
 CAPACITÉ STATIQUE (distribuée régulièrement) _____
 SERIAL/SERIE/SÉRIE _____

287

LIMITED WARRANTY

Vestil Manufacturing Corporation (“Vestil”) warrants this product to be free of defects in material and workmanship during the warranty period. *Our warranty obligation is to provide a replacement for a defective original part if the part is covered by the warranty, after we receive a proper request from the warrantee (you) for warranty service.*

Who may request service?

Only a warrantee may request service. *You are a warrantee if you purchased the product from Vestil or from an authorized distributor AND Vestil has been fully paid.*

What is an “original part”?

An original part is a part used to make the product as shipped to the warrantee.

What is a “proper request”?

A request for warranty service is proper if Vestil receives: 1) a photocopy of the Customer Invoice that displays the shipping date; AND 2) a written request for warranty service including your name and phone number. Send requests by any of the following methods:

Mail
Vestil Manufacturing Corporation
2999 North Wayne Street, PO Box 507
Angola, IN 46703

Fax
(260) 665-1339
Phone
(260) 665-7586

Email
sales@vestil.com

In the written request, list the parts believed to be defective and include the address where replacements should be delivered.

What is covered under the warranty?

After Vestil receives your request for warranty service, an authorized representative will contact you to determine whether your claim is covered by the warranty. Before providing warranty service, Vestil may require you to send the entire product, or just the defective part or parts, to its facility in Angola, IN. The warranty covers defects in the following *original* dynamic components: motors, hydraulic pumps, electronic controllers, switches and cylinders. It also covers defects in *original* parts that wear under normal usage conditions (“wearing parts”): bearings, hoses, wheels, seals, brushes, batteries, and the battery charger.

How long is the warranty period?

The warranty period for original dynamic components is 90 days. For wearing parts, the warranty period is 90 days. The warranty periods begin on the date when Vestil ships the product to the warrantee. If the product was purchased from an authorized distributor, the periods begin when the distributor ships the product. Vestil may, at its sole discretion, extend the warranty periods for products shipped from authorized distributors by *up to* 30 days to account for shipping time.

If a defective part is covered by the warranty, what will Vestil do to correct the problem?

Vestil will provide an appropriate replacement for any *covered* part. An authorized representative of Vestil will contact you to discuss your claim.

What is not covered by the warranty?

1. Labor;
2. Freight;
3. Occurrence of any of the following, which automatically voids the warranty:
 - Product misuse;
 - Negligent operation or repair;
 - Corrosion or use in corrosive environments;
 - Inadequate or improper maintenance;
 - Damage sustained during shipping;
 - Collisions or other incidental contacts causing damage to the product;
 - Unauthorized modifications: DO NOT modify the product IN ANY WAY without first receiving written authorization from Vestil. Modification(s) might make the product unsafe to use or might cause excessive and/or abnormal wear.

Do any other warranties apply to the product?

Vestil Manufacturing Corp. makes no other express warranties. All implied warranties are disclaimed to the extent allowed by law. Any implied warranty not disclaimed is limited in scope to the terms of this Limited Warranty.

