



Instruction Manual

Digital Load Indicator

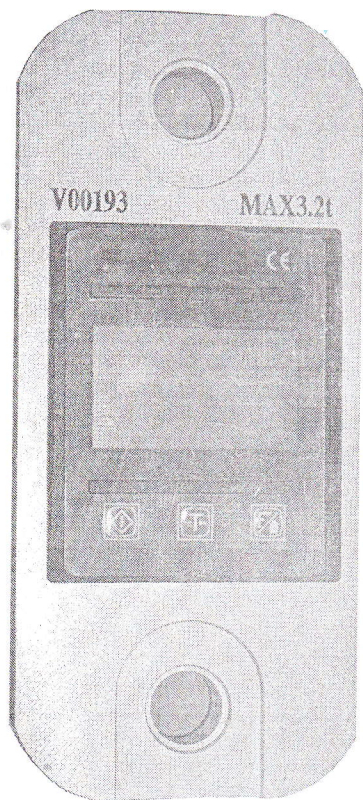


NOTE: Owner and operator must read and understand this instruction manual before using the Digital Load Indicator

1. Description

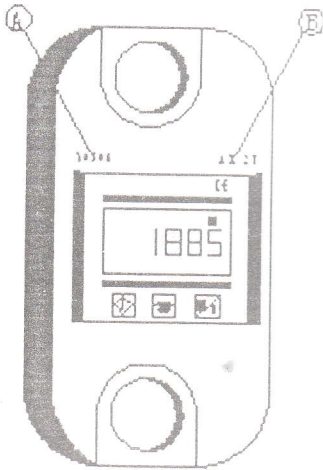


A. Series number
 B. Max. Capacity:
 (0.25t-1t-2t-3.2t-6.4t-10t-20t)

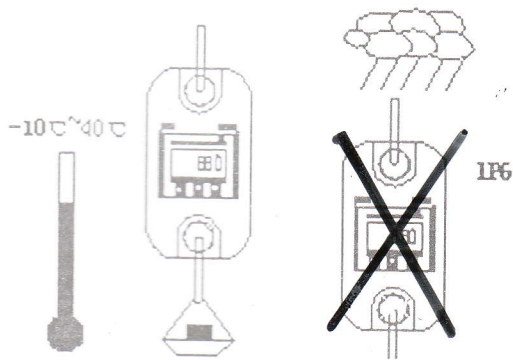


2. Specification

Scale Model	Capacity / Accuracy	Capacity / Accuracy	Capacity / Accuracy
	0-250kg/0.5kg	± 2kg	1.5 t
	0-500kg/0.5kg	± 4kg	1.5 t
	0-1000kg/2kg	± 8kg	1.5 t
	0-2000kg/5kg	± 15kg	3.25t
	0-3200kg/5kg	± 25kg	3.25t
	0-6400kg/10kg	± 50kg	6.5t
	0-10000kg/20kg	± 80kg	13.5t
	0-20000kg/50kg	± 150kg	25t

3. Display after power on

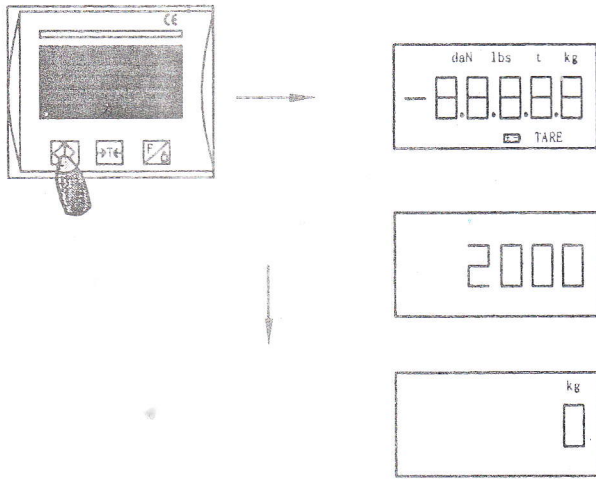


3. Display after power off

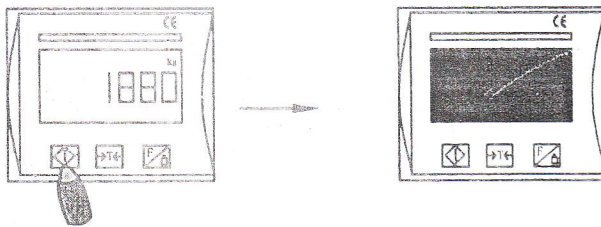


5. Self closing


Note: It hasn't setting before leaving factory.

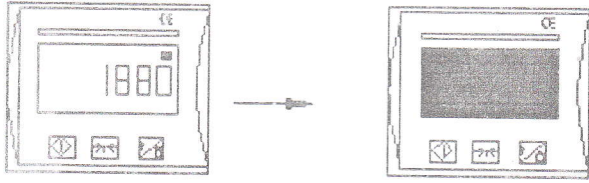


6. Change unit of measure kg-t-lbs-daN

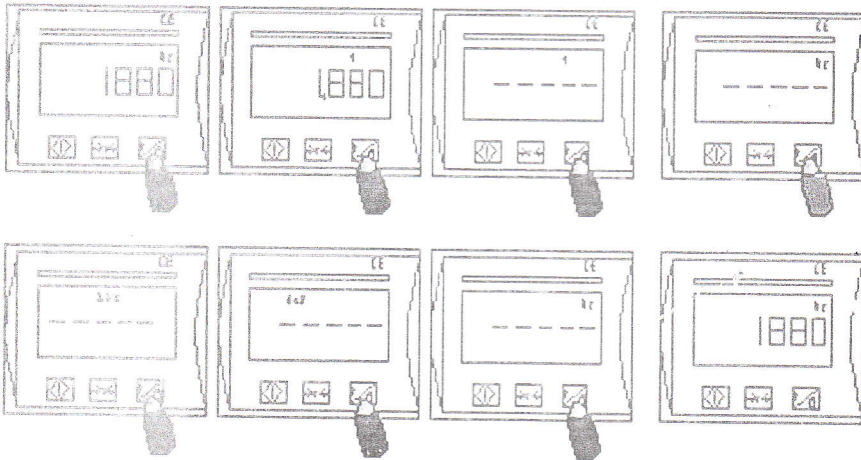


7. Net-Tare

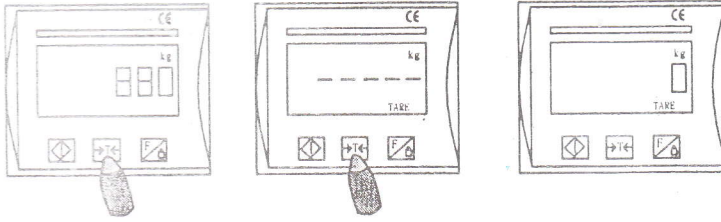

8. Net/Gross

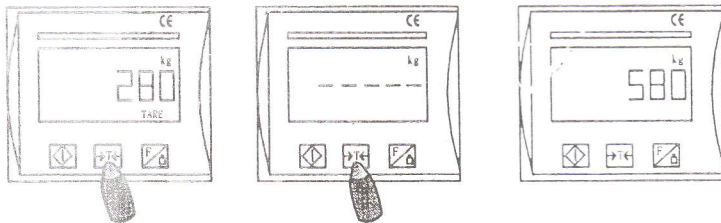

9. Battery life

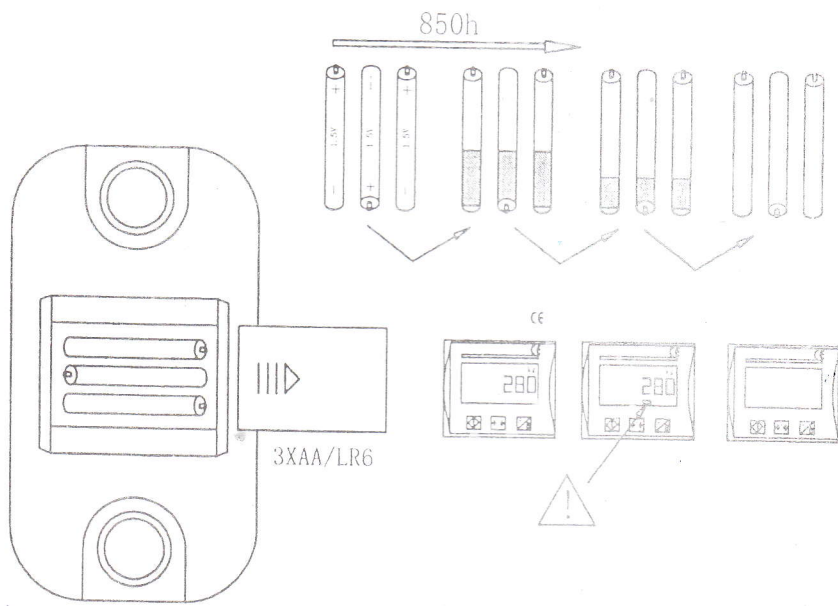

10. Frobidden

