




Vestil Manufacturing Corp.
 2999 North Wayne Street, P.O. Box 507, Angola, IN 46703
 Telephone: (260) 665-7586 -or- Toll Free (800) 348-0868
 Fax: (260) 665-1339
 Web: www.vestilmfg.com e-mail: info@vestil.com

HRAIL-9072 Interlocking Crowd Control Barriers Instruction Manual

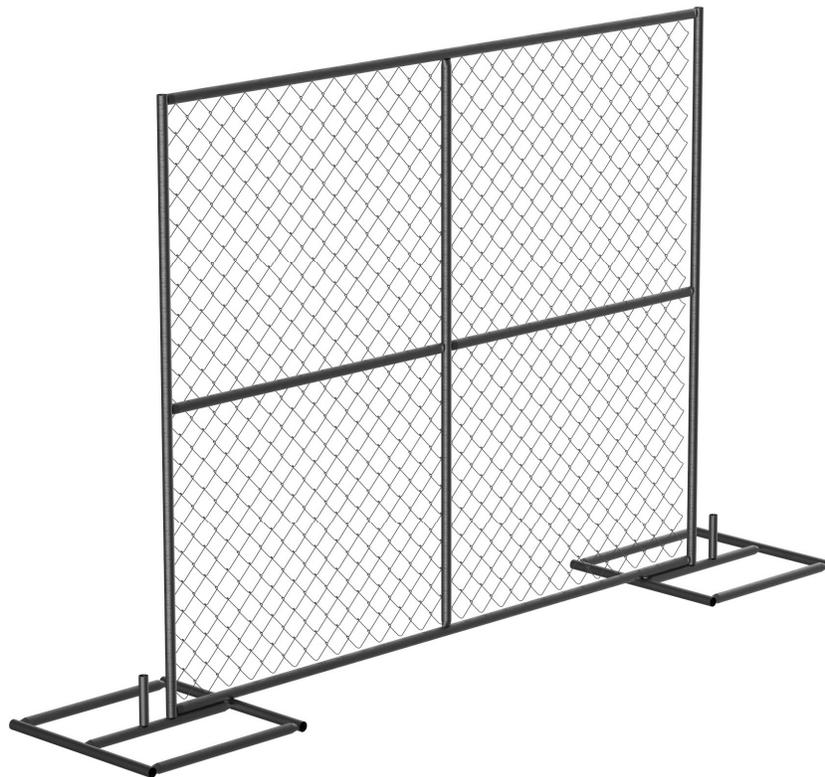

Receiving instructions:

After delivery, remove the packaging from the product. Inspect the product closely to determine whether it sustained damage during transport. If damage is discovered, immediately record a complete description of the damage on the bill of lading. If the product is undamaged, discard the packaging.

Note:

The end-user is solely responsible for confirming that product design complies with all laws, regulations, codes, and mandatory standards applied where the product is used.

Table of Contents

Specifications.....	2
Signal Words.....	2
Safety Guidelines.....	2
Assembly & Use.....	3
Limited Warranty.....	4

Specifications:

The following table provides dimensions and weights of each of the available barrier kits.

Model	Description	Approximate weight
HRAIL-9072	Start kit includes one (1) fence panel and two (2) base units	119 lb. (54.1kg)
HRAIL-A-9072	Add-on kit includes one (1) fence panel, one (1) base unit, and two (2) connectors (HRAIL-CON)	115 lb. (52.3kg)
HRAIL-PNL	Fence panel (90" (L) x 72" (H))	111 lb. (50.5kg)
HRAIL-BASE	Base unit (24" (L) x 24" (W) x 7" (H))	7 lb. (3.2kg)
HRAIL-CON	Two (2) connectors, two (2) carriage bolts, & two (2) nuts	3 lb. (1.4kg)

Signal Words:

This manual uses SIGNAL WORDS to indicate the likelihood of personal injuries, as well as the probable seriousness of those injuries, if the product is misused in the ways described. The signal words used in this manual appear below along with their definitions.



Identifies a hazardous situation which, if not avoided, **WILL** result in **DEATH** or **SERIOUS INJURY**. Use of this signal word is limited to the most extreme situations.



Identifies a hazardous situation which, if not avoided, **COULD** result in **DEATH** or **SERIOUS INJURY**.



Indicates a hazardous situation which, if not avoided, **COULD** result in **MINOR** or **MODERATE** injury.



Identifies practices likely to result in product/property damage, such as operation that might damage the product.

Safety Guidelines:

Vestil strives to identify the foreseeable hazards of using its products, but no manual can address every conceivable risk.





If this product is used improperly or carelessly, people might sustain serious personal injuries or could even be killed.

- **Read and understand the entire manual before assembling and using this barrier.**
- This barrier does NOT anchor to the ground and can fall over if pushed forcefully. **DO NOT use it as a guardrail because it does not provide fall protection.**
- DO NOT modify the barrier in any way. Modifications automatically void the Limited Warranty (p. 4) and might make the product unsafe to use.
- Inspect the product before each use. Confirm that there are no breaks or severely rusted/corroded regions, especially along the top rail.
- DO NOT use this device UNLESS all product labels are readable and undamaged.

Assembly & Use:

Assemble the barrier in the desired location by sliding one side of the panel frame over a base peg. Repeat the process with another base on the other side of the panel to complete the assembly.

Multiple barriers can be connected by installing barriers over the free pegs of the bases and over a peg of another base. When multiple barriers are used, adjacent barriers should be stabilized with HRAIL-CON connectors. Install connectors at the sites circled in the diagram below. Apply one side of the connector. The cups at each end of the connector should fit around the frame of the 2 panels. Then, apply the other side of the connector. Insert the carriage bolt through the bolt hole and tighten the nut on the bolt.

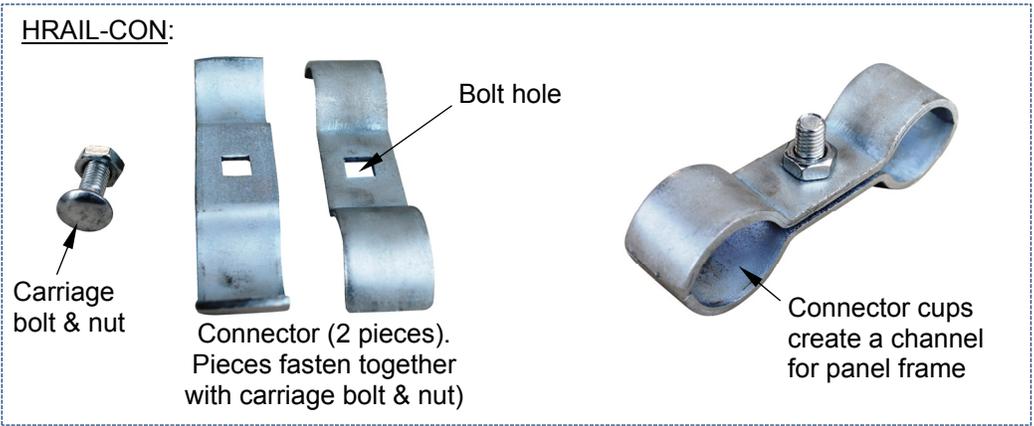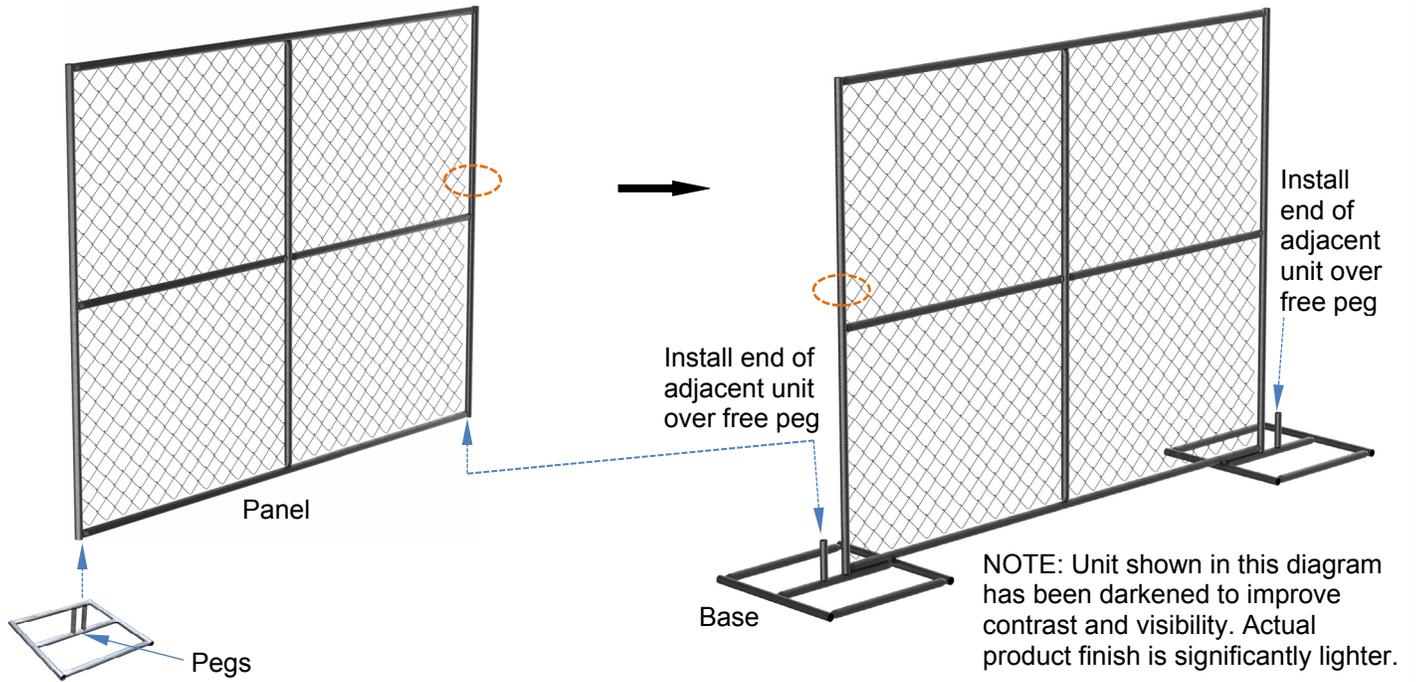

LIMITED WARRANTY

Vestil Manufacturing Corporation (“Vestil”) warrants this product to be free of defects in material and workmanship during the warranty period. *Our warranty obligation is to provide a replacement for a defective original part if the part is covered by the warranty, after we receive a proper request from the warrantee (you) for warranty service.*

Who may request service?

Only a warrantee may request service. *You are a warrantee if* you purchased the product from Vestil or from an authorized distributor AND Vestil has been fully paid.

What is an “original part”?

An original part is a part used to make the product as shipped to the warrantee.

What is a “proper request”?

A request for warranty service is proper if Vestil receives: 1) a photocopy of the Customer Invoice that displays the shipping date; AND 2) a written request for warranty service including your name and phone number. Send requests by any of the following methods:

Mail
Vestil Manufacturing Corporation
2999 North Wayne Street, PO Box 507
Angola, IN 46703

Fax
(260) 665-1339
Phone
(260) 665-7586

Email
sales@vestil.com

In the written request, list the parts believed to be defective and include the address where replacements should be delivered.

What is covered under the warranty?

After Vestil receives your request for warranty service, an authorized representative will contact you to determine whether your claim is covered by the warranty. Before providing warranty service, Vestil may require you to send the entire product, or just the defective part or parts, to its facility in Angola, IN. The warranty covers defects in the following *original* dynamic components: motors, hydraulic pumps, electronic controllers, switches and cylinders. It also covers defects in *original* parts that wear under normal usage conditions (“wearing parts”): bearings, hoses, wheels, seals, brushes, batteries, and the battery charger.

How long is the warranty period?

The warranty period for original dynamic components is 30 days. For wearing components, the warranty period is also 30 days. The warranty period begins on the date when Vestil ships the product to the warrantee. If the product was purchased from an authorized distributor, the period begins when the distributor ships the product. Vestil may extend the warranty period for products shipped from authorized distributors by *up to* 30 days to the duration necessary to account for shipping time.

If a defective part is covered by the warranty, what will Vestil do to correct the problem?

Vestil will provide an appropriate replacement for any *covered* part. An authorized representative of Vestil will contact you to discuss your claim.

What is not covered by the warranty?

1. Labor;
2. Freight;
3. Occurrence of any of the following, which automatically voids the warranty:
 - Product misuse;
 - Negligent operation or repair;
 - Corrosion or use in corrosive environments;
 - Inadequate or improper maintenance;
 - Damage sustained during shipping;
 - Collisions or other incidental contacts causing damage to the product;
 - Unauthorized modifications: DO NOT modify the product IN ANY WAY without first receiving written authorization from Vestil. Modification(s) might make the product unsafe to use or might cause excessive and/or abnormal wear.

Do any other warranties apply to the product?

Vestil Manufacturing Corp. makes no other express warranties. All implied warranties are disclaimed to the extent allowed by law. Any implied warranty not disclaimed is limited in scope to the terms of this Limited Warranty.

