# HT-20-2436A INSTRUCTION MANUAL

## **BASIC DATA:**

MODEL	CAPACITY	LOWERED HEIGHT	RAISED HEIGHT	TABLE DIMENSIONS	NET WEIGHT
HT-20-2436A	2,000LBS.	36"	54"	24" X 36"	282 LBS.


#### **ASSEMBLY INSTRUCTIONS:**

- 1. Put the frame on the ground, install outer guide posts (#15), and secure them with M8 bolts (#17), flat washer (#18) and lock nut (#20).
- Install hydraulic cylinder on the frame, and secure it with ¼-20 bolts (#57), washers (#58), & lock nuts (#59).
- 3. Remove solid plug on top end of the cylinder and replace it with bleeder (vent) plug to allow air to be bled from the hydraulic system.
- 4. Lift up the cylinder to <sup>1</sup>/<sub>2</sub>" height, insert female side of extension rod (#56) on piston rod, and insert male side of extension rod in cylinder joint block (#6).
- 5. Install inner guide posts (#11) and secure them with M8 bolts (#14), spring washer (#13) and flat washer (#12).
- 6. Install push/pull handle (#1) on front side of the table (#5), and secure it with M8 bolts (#4), spring washer (#3) and flat washer (#2).
- Adjust the verticality of inner guide post (#11) and outer guide post (#15) with the help of M8 bolt (#16)

## 8. Now tighten all bolts and nuts.

9. Check all the parts, and then test this lift table with weight and without weight.

HT-20 Post Hydraulic Table

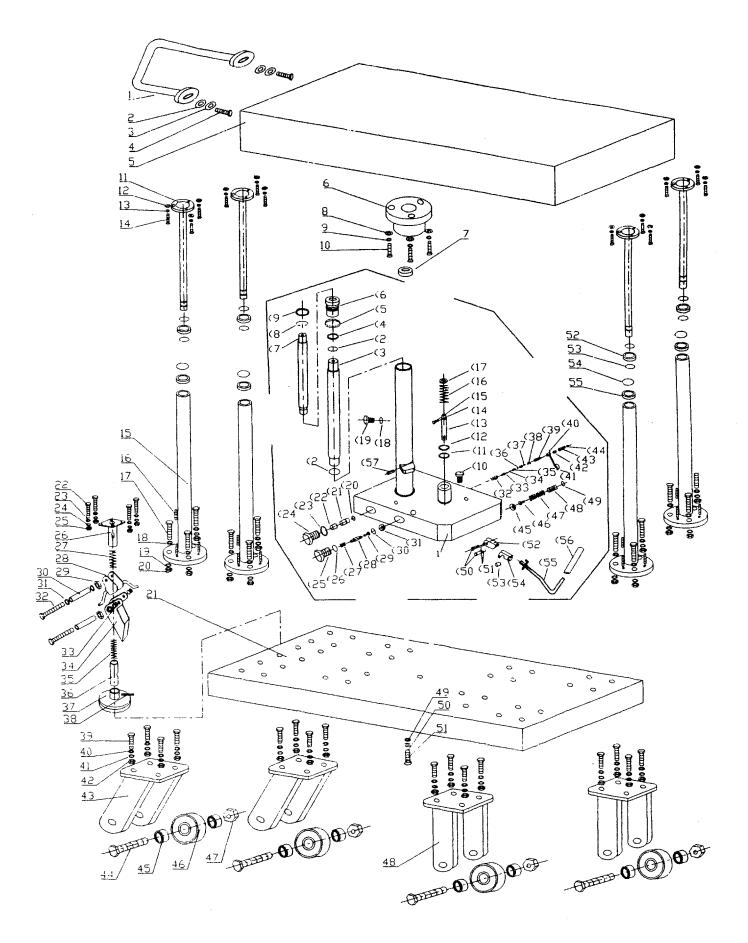

No.	Description	Qʻty	No.	Description	Q'ty	No.	Description	Q'ty
1	Handle	1	38	Spring Pin ⊄8×35	1	(20	O-ring 9×1.8	1
2	Flat Washer	2	39	Hex Cap Bolt M10×30	16	(21	Lowering Valve	1
3	Spring Washer	2	40	Flat Washer ⊄ 10	16	(22	Washer ⊄12×8	1
4	Hex Cap Bolt	2	41	Spring Washer ⊄ 10	16	(23	Washer ¢14	1
5	Table	1	42	Hex Cap Nut M10	16	(24	Screw Plug M14×1	1
6	Cylinder Joint Bolck	1	43	Swivel Wheel Holder	2	(25	Set Screw	1
7	Round Nut	1	44	Hex Cap Bolt	2	(26	O-ring ⊄ 16×2.4	1
8	Flat Washer ⊄8	3	45	Bearing	8	(27	Spring	1
9	Spring Washer ⊄8	3	46	Wheel	4	(28	Valve Core	1
10	Hex Cap Bolt M8×20	3	47	Hex Cap Nut M8	4	(29	Valve Cover	1
11	Inter Guide Post	4	48	Fixed Wheel Holder	2	(30	O-ring ⊄ 10×1.9	1
12	Flat Washer	12	49	Big Washer	1	(31	Steel Ball ⊄ 7	1
13	Spring Washer	12	50	Spring Washer	1	(32	Spring	1
14	Hex Cap Bolt M8×20	12	51	Hex Cap Bolt M12×20	1	(33	Push Rod	l
15	Outer Guide Post	4	52	Separate Cover	4	(34	O-ring ⊄ 15×2.4	1
16	Set Bolt M8×10	12	53	Steel Wire C-ring	8	(35	Push Rod Cover	1
17	Hex Cap Bolt M8×35	12	54	Steel Wire C-ring	4	(36	Guide Cover	1
18	Flat Washer	12	55	Separate Cover	4	(37	Pin	1
19	Spring Washer	12	(1	Valve	1	(38	Spring	1
20	Hex Cap Nut	12	(2	O-ring 32.5×1.8	2	(39	Link Rod	1
21	Frame	1	(3	Inter Cylinder	1	(40	M6 Bolt	1
22	Hex Cap Bolt M8×20	4	(4	Dust Cover DH28	1	(4)	Slice	l
23	Flat Washer	4	(5	O-ring 56×3.5	1	(42	Bushing	1
24	Spring Washer	4	(6	Cylinder Cover	1	(43	Bolt	1
25	Hex Cap Nut	4	(7	Lift Piston	1	(44	Nut	1
26	Brake Holder	1	(8	O-ring 34×3:5	1	(4:	5 Steel Ball ⊄ 7	1
27	Spring	1	(9	Dust Cover DH28	1	(46	Spring Seat	1
28	Wave Arm	1	(10	Hex Cap Bolt	1	(4)	7 Spring	1
29	Set Nut M8	1	(11	Oil Seal UHS31.5	1	(48	3 Set Screw	1
30	Pipe Cover	2	(12	Dust Cover DH31 5	1	(49	O-ring 10×1.9	1
31	Flat Washer	4	(13	Pump Piston	1	(50	) Shaft	2
32	Hex Cap Bolt M8×55	2	(14	Compose Washer ⊄4	l	(5	C-ring	2
33	Screw ⊄8	2	(15	Hex Cap Plug ⊄ 4	1	(52	2 Rotate Block	1
34	Foot Pedal	1	(16	Spring Seat	1	(5.	B Press Wheel	1
35	Spring	1	(17	C-ring ⊄ 15	1	(54	Press Wheel Seat	1
36	Center Pipe	1	(18	O-ring ⊄11×1.9	1	(5:	5 Foot Pedal Rod	1
37	Control Slice	1	(19	Hex Cap Plug M10×1	1	(5	5 Foot Pedal Cover	1

٠.

## HT-20 Post Hydraulic Table