

## HYD-15: Parts List

Reference No.	Engineering Part No.	Description	Quantity
1	HYD15-09-1	Chain Wheel Cover	1
2	HYD15-09-2	Spring Washer	1
3	HYD15-09-3	Semicircle Screw	1
4	HYD15-09-4	Hex Cap Bolt	2
5	HYD15-09-5	Flat Washer	2
6	HYD15-09-6	Chain Wheel	2
7	HYD15-09-7	Chain Wheel Shaft	1
8	HYD15-09-8	Spring Column Pin	1
9	HYD15-09-9	Chain Wheel Seat	1
10	HYD15-09-10	Set Bolt	1
11	HYD15-09-11	Chain	2
12	HYD15-09-12	Chain Bolt	2
13	HYD15-09-13	Flat Washer	2
14	HYD15-09-14	Set Nut	2
15	HYD15-09-15	Oil Mouth	1
16	HYD15-09-16	Lock Pin	1
17	HYD15-09-17	Joint (welden) Block	1
18	HYD15-09-18	Steel Ball	1
19	HYD15-09-19	Spring	1
20	HYD15-09-20	Hex Cap Bolt	1
21	HYD15-09-21	Oil Mouth	1
22	HYD15-09-22	Pressure Wheel	1
23	HYD15-09-23	C-ring	1
24	HYD15-09-24	Shaft	1
25	HYD15-09-25	Oil Mouth	1
26	HYD15-09-26	Shaft	1
27	HYD15-09-27	Nut	1
28	HYD15-09-28	Foot Pedal Holder	1
29	HYD15-09-29	Foot Pedal	1
30	HYD15-09-30	Foot Pedal Cover	1
31	HYD15-09-31	Hex Hand Wheel	1
32	HYD15-09-32	Set Screw	2
33	HYD15-09-33	Spring Set Cover	1
34	HYD15-09-34	Turn Spring	1
35	HYD15-09-35	Straight Rod	1
36	HYD15-09-36	Upper Joint Cover	1
37	HYD15-09-37	Lower Joint Cover	1
38N	HYD15-09-38N	Cylinder / Pump Assembly	1
39	HYD15-09-39	Top Nut	2
40	HYD15-09-40	Slide Post	2
41	HYD15-09-41	Round Screw	6
42	HYD15-09-42	Rubber Washer	6
43	HYD15-09-43	Plastic protective cover	1
44	HYD15-09-44	Cart Holder	1
45	HYD15-09-45	Nut	2
46	HYD15-09-46	Spring Washer	2
47	HYD15-09-47	Flat Washer	2
48	HYD15-09-48	Flat Washer	4

49	HYD15-09-49	Spring Washer	4
50	HYD15-09-50	Hex Cap Bolt	4
51	HYD15-09-51	Flat Washer	2
52	HYD15-09-52	Hex Cap Bolt	2
53	HYD15-09-53	Dust Cover	2
54	HYD15-09-54	Big Nut	2
55	HYD15-09-55	Big Spring Washer	2
56	HYD15-09-56	Wheel Holder	2
57	HYD15-09-57	Nut	2
58	HYD15-09-58	Spacer (Separate Cover)	2
59	HYD15-09-59	Bearing	2
60	HYD15-09-60	Big Wheel	2
61	HYD15-09-61	Bearing	2
62	HYD15-09-62	Bearing Cover	2
63	HYD15-09-63	Spacer (Separate Cover)	2
64	HYD15-09-64	Brake Board	2
65	HYD15-09-65	Brake Holder	2
66	HYD15-09-66	Hex Cap Bolt	2
67	HYD15-09-67	C-ring	2
68	HYD15-09-68	Shaft	2
69	HYD15-09-69	Bearing	3
70	HYD15-09-70	Small Wheel	2
71	HYD15-09-71	Bearing	2
72	HYD15-09-72	Move Block	1
73	HYD15-09-73	C-ring	2
74	HYD15-09-74	Long Shaft	1
75	HYD15-09-75	Fork	2
76	HYD15-09-76	Nut	4
77	HYD15-09-77	Spring Washer	4
78	HYD15-09-78	Flat Washer	4
79	HYD15-09-79	Spacer (Separate Cover)	4
80	HYD15-09-80	Roller Guide	4
81	HYD15-09-81	No Oil Bearing	4
82	HYD15-09-82	Roller Guide Shaft	4
1-P	HYD15-09a-1	Top Nut	1
2-P	HYD15-09a-2	Dust Cover	1
3-P	HYD15-09a-3	O-ring	1
4-P	HYD15-09a-4	Oil Seal	1
5-P	HYD15-09a-5	Lift Piston	1
6-P	HYD15-09a-6	Inner Cylinder Body	1
7-P	HYD15-09a-7	Washer	1
8-P	HYD15-09a-8	Filter	1
9-P	HYD15-09a-9	Washer	1
10-P	HYD15-09a-10	Hex Cap Plug	1
11-P	HYD15-09a-11	O-ring	1
12-P	HYD15-09a-12	Outer Cylinder Body	1
13-P	HYD15-09a-13	Washer	1
14-P	HYD15-09a-14	Hex Cap Plug	1
15-P	HYD15-09a-15	O-ring	1
16-P	HYD15-09a-16	Spring	1
17-P	HYD15-09a-17	Steel Ball bearing	1
18-P	HYD15-09a-18	Spring	1
19-P	HYD15-09a-19	Spring	1

20-P	HYD15-09a-20	Column Plug	1
21-P	HYD15-09a-21	Hex Cap Plug	1
22-P	HYD15-09a-22	O-ring	1
23-P	HYD15-09a-23	Lowering Valve	1
24-P	HYD15-09a-24	Valve	1
25-P	HYD15-09a-25	C-ring	1
26-P	HYD15-09a-26	Spring Seat	1
27-P	HYD15-09a-27	Dust Cover	1
28-P	HYD15-09a-28	O-ring	1
29-P	HYD15-09a-29	Big Spring Washer	1
30-P	HYD15-09a-30	Small Lift Piston	1
31-P	HYD15-09a-31	Oil Seal	1
32-P	HYD15-09a-32	Pump Cylinder	1
33-P	HYD15-09a-33	O-ring	1
34-P	HYD15-09a-34	O-ring	1
35-P	HYD15-09a-35	Close Cover	1
36-P	HYD15-09a-36	Steel Ball Bearing	1
37-P	HYD15-09a-37	Close Cover	1
38-P	HYD15-09a-38	Nylon Washer	1