 


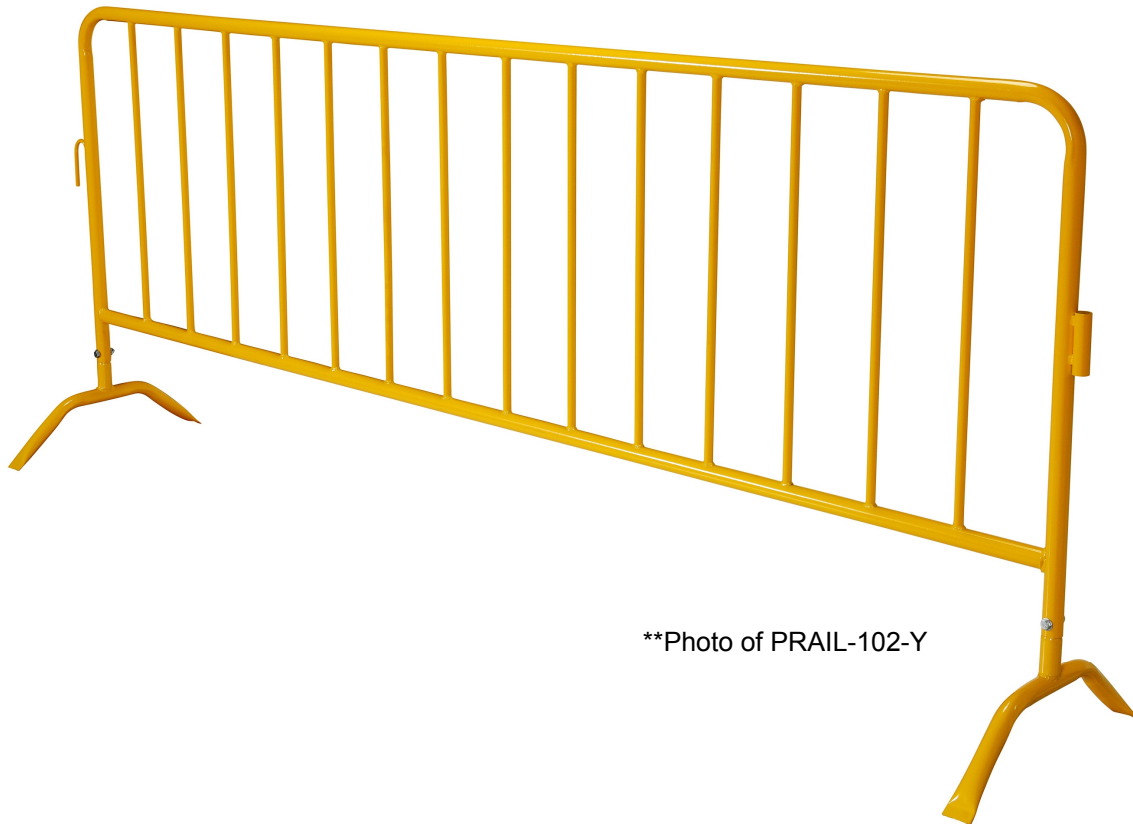

Vestil Manufacturing Corp.
 2999 North Wayne Street, P.O. Box 507, Angola, IN 46703
 Telephone: (260) 665-7586 -or- Toll Free (800) 348-0868
 Fax: (260) 665-1339
 Web: www.vestilmfg.com e-mail: info@vestil.com

PRAIL-102 Interlocking Crowd Control Barriers



**Photo of PRAIL-102-Y

Receiving instructions:

After delivery, remove the packaging from the product. Inspect the product closely to determine whether it sustained damage during transport. If damage is discovered, immediately record a complete description of the damage on the bill of lading. If the product is undamaged, discard the packaging.

Note:

The end-user is solely responsible for confirming that product design complies with all laws, regulations, codes, and mandatory standards applied where the product is used.

Table of Contents

Signal Words.....	2
Safety Guidelines.....	2
Barrier Frame Models.....	2
Types of Feet & Foot Installation.....	2
Specifications.....	3
Using the Barrier.....	3
Limited Warranty.....	4

Signal Words:

This manual uses SIGNAL WORDS to indicate the likelihood of personal injuries, as well as the probable seriousness of those injuries, if the product is misused in the ways described. The signal words used in this manual appear below along with their definitions.

- ⚠ DANGER** Identifies a hazardous situation which, if not avoided, WILL result in DEATH or SERIOUS INJURY. Use of this signal word is limited to the most extreme situations.
- ⚠ WARNING** Identifies a hazardous situation which, if not avoided, COULD result in DEATH or SERIOUS INJURY.
- ⚠ CAUTION** Indicates a hazardous situation which, if not avoided, COULD result in MINOR or MODERATE injury.
- NOTICE** Identifies practices likely to result in product/property damage, such as operation that might damage the product.

Safety Guidelines:


Vestil strives to identify all foreseeable hazards of using its products, but no manual can address every conceivable risk. Read the entire manual before assembling and using the barrier.

⚠ WARNING If this product is used improperly or carelessly, people might sustain serious personal injuries or could even be killed.

- **Read and understand the entire manual before assembling and using this barrier.**
- This barrier does NOT anchor to the ground and can fall over if pushed. **DO NOT use it as a guardrail because it does not provide fall protection.**
- DO NOT modify the barrier in any way. Modifications automatically void the Limited Warranty (p. 4) and might make the product unsafe to use.
- Inspect the product before each use. Confirm that there are no breaks or severely rusted/corroded regions, especially along the top rail.
- DO NOT use this device UNLESS all product labels are readable and undamaged.

Barrier Frame Models


Barrier frames are available in 3 finishes: yellow powder coat, galvanized, and stainless steel. Heavy duty barriers are also available in all 3 finishes.

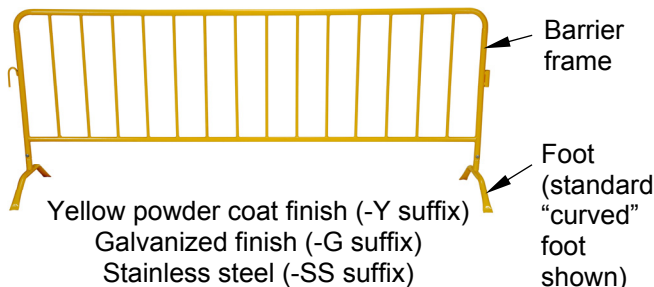

Barrier frame model	Part no.
PRAIL-102-Y	23-001-363-B
PRAIL-102-G	23-001-353-B
PRAIL-102-HD-Y (Heavy duty)	23-001-368-B
PRAIL-102-HD-G (Heavy duty)	23-001-358-B
PRAIL-102-SS	23-001-373-B
PRAIL-102-HD-SS (Heavy duty)	23-001-374-B


Types of Feet

Unless wheels or flat feet are ordered, barriers include (standard) curved feet. Hardware included.

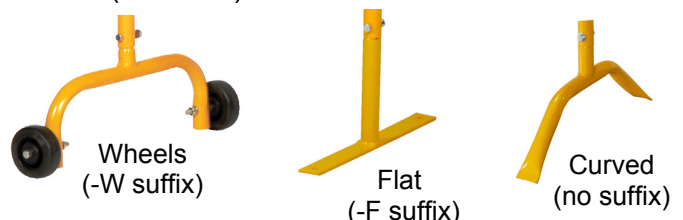

Foot	Finishes available	Part no.
Curved (standard foot)	Yellow	23-014-309
	Galvanized	23-014-306
	Stainless steel	23-014-318
Flat	Yellow	23-014-311
	Galvanized	23-014-308
Wheels	Yellow	23-014-310
	galvanized	23-014-307

Foot installation: Insert the feet into the legs of the barrier frame. Align the bolt holes in the foot with the holes in the frame. Insert 1/4"-20 x 2" bolts through the holes. Secure each bolt with a 1/4" flat washer and 1/4"-20 hex nut.

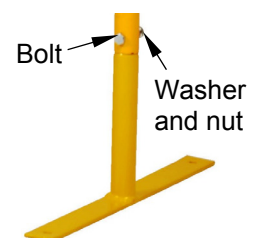

Specifications:


Model	Foot type & quantity			Barrier finish			Barrier duty	Net weight
	Curved	Flat	Wheels	Yellow	Galvanized	Stainless steel		
PRAIL-102-G	2				X		Standard	56 lb. (kg)
PRAIL-102-G-FF		2			X		Standard	53 lb. (kg)
PRAIL-102-G-W	1		1		X		Standard	54 lb. (kg)
PRAIL-102-G-WF		1	1		X		Standard	53 lb. (kg)
PRAIL-102-G-WW			2		X		Standard	54 lb. (kg)
PRAIL-102-HD-G	2				X		Heavy	95 lb. (kg)
PRAIL-102-HD-G-FF		2			X		Heavy	91 lb. (kg)
PRAIL-102-HD-G-W	1		1		X		Heavy	94 lb. (kg)
PRAIL-102-HD-G-WF		1	1		X		Heavy	93 lb. (kg)
PRAIL-102-HD-G-WW			2		X		Heavy	94 lb. (kg)
PRAIL-102-SS	2					X	Standard	61 lb. (kg)
PRAIL-102-HD-SS	2					X	Heavy	37 lb. (kg)
PRAIL-102-HD-Y	2			X			Heavy	95 lb. (kg)
PRAIL-102-HD-Y-FF		2		X			Heavy	91 lb. (kg)
PRAIL-102-HD-Y-W	1		1	X			Heavy	94 lb. (kg)
PRAIL-102-HD-Y-WF		1	1	X			Heavy	93 lb. (kg)
PRAIL-102-HD-Y-WW			2	X			Heavy	94 lb. (kg)
PRAIL-102-Y	2			X			Standard	56 lb. (kg)
PRAIL-102-Y-FF		2		X			Standard	53 lb. (kg)
PRAIL-102-Y-W	1		1	X			Standard	54 lb. (kg)
PRAIL-102-Y-WF		1	1	X			Standard	53 lb. (kg)
PRAIL-102-Y-WW			2	X			Standard	54 lb. (kg)

Using the Barrier:

Carry the barrier to the desired location. If the barrier is equipped with at least one foot with wheels, then it can be pushed/rolled wherever needed.

Multiple barriers can be connected. Simply lift the end of the barrier where the hook is located and insert the hook into the receiver of an adjacent barrier.

To facilitate compact storage, feet can be disconnected from the barrier. Remove the hardware (see "Foot installation" on p. 2) and pull the foot out of barrier.

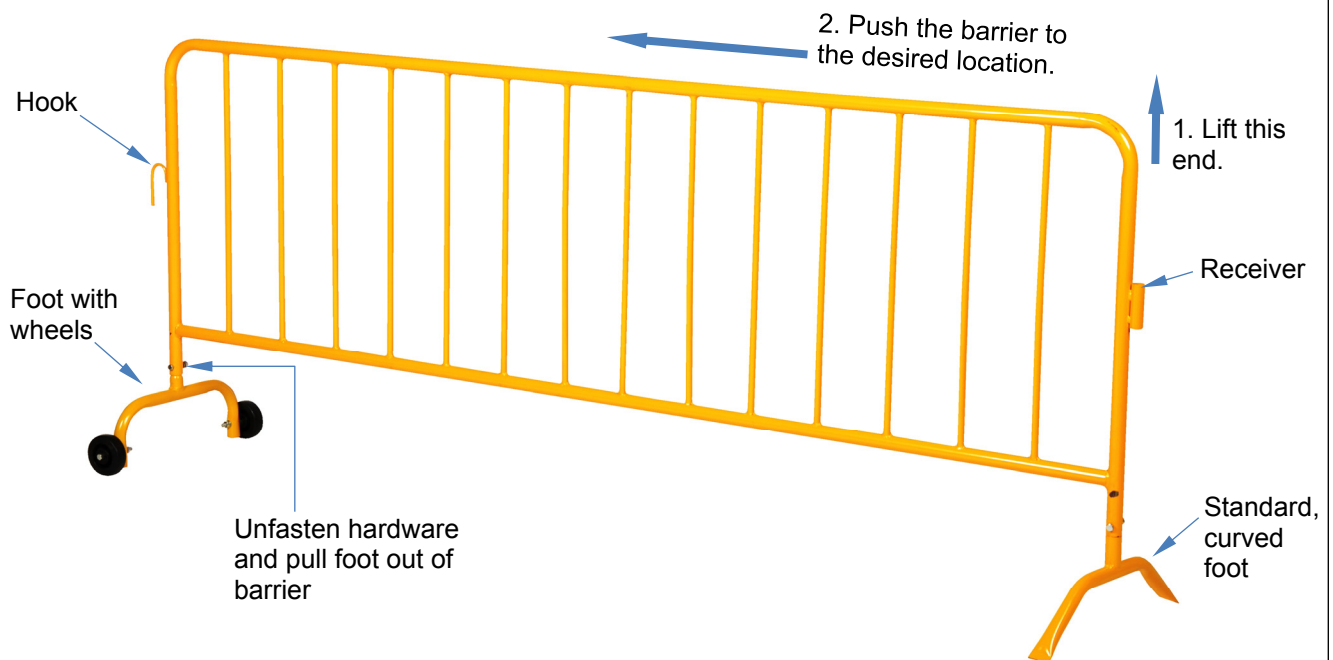

LIMITED WARRANTY

Vestil Manufacturing Corporation (“Vestil”) warrants this product to be free of defects in material and workmanship during the warranty period. Our warranty obligation is to provide a replacement for a defective original part if the part is covered by the warranty, after we receive a proper request from the warrantee (you) for warranty service.

Who may request service?

Only a warrantee may request service. *You are a warrantee if* you purchased the product from Vestil or from an authorized distributor AND Vestil has been fully paid.

What is an “original part”?

An original part is a part used to make the product as shipped to the warrantee.

What is a “proper request”?

A request for warranty service is proper if Vestil receives: 1) a photocopy of the Customer Invoice that displays the shipping date; AND 2) a written request for warranty service including your name and phone number. Send requests by any of the following methods:

<u>Mail</u>	<u>Fax</u>	<u>Email</u>
Vestil Manufacturing Corporation 2999 North Wayne Street, PO Box 507 Angola, IN 46703	(260) 665-1339 <u>Phone</u> (260) 665-7586	info@vestil.com

In the written request, list the parts believed to be defective and include the address where replacements should be delivered.

What is covered under the warranty?

After Vestil receives your request for warranty service, an authorized representative will contact you to determine whether your claim is covered by the warranty. Before providing warranty service, Vestil may require you to send the entire product, or just the defective part or parts, to its facility in Angola, IN. The warranty covers defects in the following *original* dynamic components: motors, hydraulic pumps, electronic controllers, switches and cylinders. It also covers defects in *original* parts that wear under normal usage conditions (“wearing parts”): bearings, hoses, wheels, seals, brushes, batteries, and the battery charger.

How long is the warranty period?

The warranty period for original dynamic components is 30 days. For wearing components, the warranty period is also 30 days. The warranty period begins on the date when Vestil ships the product to the warrantee. If the product was purchased from an authorized distributor, the period begins when the distributor ships the product. Vestil may extend the warranty period for products shipped from authorized distributors by *up to* 30 days to the duration necessary to account for shipping time.

If a defective part is covered by the warranty, what will Vestil do to correct the problem?

Vestil will provide an appropriate replacement for any *covered* part. An authorized representative of Vestil will contact you to discuss your claim.

What is not covered by the warranty?

1. Labor;
2. Freight;
3. Occurrence of any of the following, which automatically voids the warranty:
 - Product misuse;
 - Negligent operation or repair;
 - Corrosion or use in corrosive environments;
 - Inadequate or improper maintenance;
 - Damage sustained during shipping;
 - Collisions or other incidental contacts causing damage to the product;
 - Unauthorized modifications: DO NOT modify the product IN ANY WAY without first receiving written authorization from Vestil. Modification(s) might make the product unsafe to use or might cause excessive and/or abnormal wear.

Do any other warranties apply to the product?

Vestil Manufacturing Corp. makes no other express warranties. All implied warranties are disclaimed to the extent allowed by law. Any implied warranty not disclaimed is limited in scope to the terms of this Limited Warranty.

