

2,000 / 907
POUNDS KILOGRAMS

397

6,000 / 2,721
POUNDS KILOGRAMS

400

4,000 / 1,814
POUNDS KILOGRAMS

398

8,000 / 3,628
POUNDS KILOGRAMS

559

10,000 / 4,535
POUNDS KILOGRAMS

683

OR

AHS

AHSN

⚠ WARNING


Improper use could result in serious personal injuries or death.

- DO NOT assemble, use or maintain crane until you read & understand entire owner's manual.
- DO NOT use near overhead electric appliances or wires.
- DO NOT exceed static capacity. Load applied to crane includes weights of everything attached to it, hoist, trolley, rigging, etc.
- DO NOT use if damaged or malfunctioning. Confirm all pins properly installed and all fasteners are tight.
- DO NOT operate hoist unless centered above load.
- DO NOT operate hoist with twisted, kinked, or damaged chain or rope.
- DO NOT operate rope hoist unless rope properly seated in its groove.
- DO NOT lift or suspend people.
- DO NOT lift loads over people.
- DO NOT operate manual motions with other than manual power.
- ONLY use on level concrete or equal surface with each caster locked perpendicularly to adjacent caster.
- Immobilize all casters/wheels before loading, e.g. with chocks.
- DO NOT remove or obscure any safety label.
- DO NOT cantilever loads.
- DO NOT move crane while loaded unless equipped with V-groove casters (AHA-2/4-V or AHA-2/4-V4) running on V-Track and hoist/trolley immobilized.

⚠ ADVERTENCIA

El uso inapropiado puede resultar en serias lesiones personales o muerte.

- NO arme, use o de mantenimiento a la grúa hasta que haya leído y entendido el manual completo.
- NO utilice cerca de electrodomesticos o cables.
- No exceda la capacidad estática. La carga aplicada a la grúa incluye el peso de todo lo que lleva, izar, carretilla, aparejo, etc.
- NO use si esta dañada o tiene mal funcionamiento. Asegure que todo este instalado apropiadamente y bien asegurado.
- NO operar el izar si la carga no esta centrada sobre la carga.
- NO operar el izar si la cadena o cuerda esta enredada, doblada o dañada.
- NO operar si la cuerda del izar no esta sentada en su surco
- NO levante o columpie a personas.
- NO levante cargas por encima de personas
- NO hacer movimientos manuales con otra potencia que no sea manual.
- Solo utilice en pavimento o superficies niveladas con cada rueda bloqueada perpendicularmente a las ruedas adyacente
- Immobilize todas las ruedas antes de cargar, p.ej. con cuñas.
- NO quitar ni ocultar ninguna etiqueta de seguridad.
- NO cargue viga voladiza
- DO NOT move crane while loaded
- NO mueva la grúa al menos que este equipado con ruedas V-GROOVE (AHA-2/4-V or AHA-2/4-V4) corriendo en V-Track y con la carretilla y el izar immobilizados.

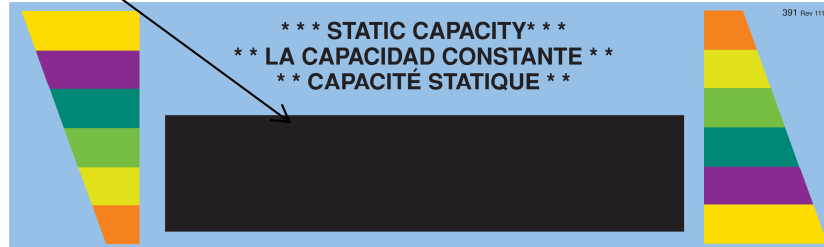

391, both sides



STATIC CAPACITY
LA CAPACIDAD
CONSTANTE
CAPACITÉ STATIQUE

532 • Revised 05/11

532, one leg, each end

2,000 LBS.
907 KGS.

395

6,000 LBS.
2,721 KGS.

420

4,000 LBS.
1,814 KGS.

392

8,000 LBS.
3,628 KGS.

558

10,000 LBS.
4,535 KGS.

684

256, one leg,
each end

Label 1072 is to be applied to the outside of individual packaging

⚠ WARNING:
Reproductive Harm -
www.P65Warnings.ca.gov.

⚠ WARNING: Cancer -
www.P65Warnings.ca.gov.

⚠ ADVERTENCIA:
Daño Reproductivo -
www.P65Warnings.ca.gov.

⚠ ADVERTENCIA: Cáncer -
www.P65Warnings.ca.gov.

1072

ADJUSTABLE HEIGHT GANTRY CRANE

1/09/2023