

FHA

2,000 / 907
POUNDS KILOGRAMS


397

4,000 / 1,814
POUNDS KILOGRAMS

398

6,000 / 2,721
POUNDS KILOGRAMS

400

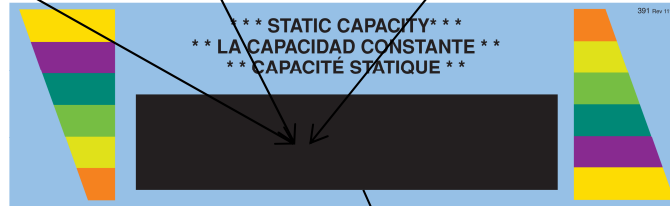

391, both sides



STATIC CAPACITY
LA CAPACIDAD
CONSTANTE
CAPACITÉ STATIQUE



532 • Revised 05/11

532, one leg
each end

2,000 LBS.
907 KGS.

395

4,000 LB
1,814 KG

392

6,000 LBS.
2,721 KGS.

420

⚠ WARNING

Improper use could result in serious personal injuries or death.

- DO NOT assemble, use or maintain crane until you read & understand entire owner's manual.
- DO NOT use near overhead electric appliances or wires.
- DO NOT exceed static capacity. Load applied to crane includes weights of everything attached to it, hoist, trolley, rigging, etc.
- DO NOT use if damaged or malfunctioning. Confirm all pins properly installed and all fasteners are tight.
- DO NOT operate hoist unless centered above load.
- DO NOT operate hoist with twisted, kinked, or damaged chain or rope.
- DO NOT operate rope hoist unless rope properly seated in its groove.
- DO NOT lift or suspend people.
- DO NOT lift loads over people.
- DO NOT operate manual motions with other than manual power.
- ONLY use on level concrete or equal surface with each caster locked perpendicularly to adjacent caster.
- Immobilize all casters/wheels before loading, e.g. with chocks.
- DO NOT remove or obscure any safety label.
- DO NOT cantilever loads.
- DO NOT move crane while loaded unless equipped with V-groove casters (AHA-2/4-V or AHA-2/4-V4) running on V-Track and hoist/trolley immobilized.

⚠ ADVERTENCIA

El uso inapropiado puede resultar en serias lesiones personales o muerte.

- NO arme, use o de mantenimiento a la grúa hasta que haya leído y entendido el manual completo.
- NO utilice cerca de electrodomesticos o cables.
- No exceda la capacidad estática. La carga aplicada a la grúa incluye el peso de todo lo que lleva, izár, carretilla, aparejo, etc.
- NO use si esta dañada o tiene mal funcionamiento. Asegurarse que todo este instalado apropiadamente y bien asegurado.
- NO operar el izár si la carga no esta centrada sobre la carga.
- NO operar el izár si la cadena o cuerda esta enredada, doblada o dañada.
- NO operar si la cuerda del izár no esta sentada en su surco
- NO levante o columpie a personas.
- NO levante cargas por encima de personas
- NO hacer movimientos manuales con otra potencia que no sea manual
- Solo utilice en pavimento o superficies aniveladas con cada rueda bloqueada perpendicularmente a las ruedas adyacente
- Immobilize todas las ruedas antes de cargar, p.ej. con cuñas.
- NO quitar ni ocultar ninguna etiqueta de seguridad.
- NO cargue viga voladiza
- DO NOT move crane while loaded NO mueva la grúa al menos que este equipado con ruedas V-GROOVE (AHA-2/4-V or AHA-2/4-V4) corriendo en V-Track y con la carretilla y el izár immobilizados.

256, one leg, each end

Label 1072 is to be applied to the outside of individual packaging

⚠ WARNING:
Reproductive Harm -
www.P65Warnings.ca.gov.

⚠ WARNING: Cancer -
www.P65Warnings.ca.gov.

⚠ ADVERTENCIA:
Daño Reproductivo -
www.P65Warnings.ca.gov.

⚠ ADVERTENCIA: Cáncer -
www.P65Warnings.ca.gov.

1072

FIXED HEIGHT STEEL GANTRY CRANE

4/9/2020