

500 / 226
POUNDS KILOGRAMS

598

8,000 / 3,628
POUNDS KILOGRAMS

559

2,000 / 907
POUNDS KILOGRAMS

397

OR

6,000 / 2,721
POUNDS KILOGRAMS

400

4,000 / 1,814
POUNDS KILOGRAMS

398

10,000 / 4,535
POUNDS KILOGRAMS


683

FHS

FHSN

⚠ WARNING
Improper use could result in serious personal injuries or death.
• DO NOT assemble, use or maintain crane until you read & understand entire owner's manual.
• DO NOT use near overhead electric appliances or wires.
• DO NOT exceed static capacity. Load applied to crane includes weights of everything attached to it: hoist, trolley, rigging, etc.
• DO NOT use if damaged or malfunctioning. Confirm all pins properly installed and all fasteners are tight.
• DO NOT operate hoist unless centered above load.
• DO NOT operate hoist with twisted, kinked, or damaged chain or rope.
• DO NOT operate rope hoist unless rope properly seated in its groove.
• DO NOT lift or suspend people.
• DO NOT lift loads over people.
• DO NOT operate manual motions with other than manual power.
• ONLY use on level concrete or equal surface with each caster locked perpendicularly to adjacent caster.
• Immobilize all casters/wheels before backing, e.g. with chocks.
• DO NOT remove or obscure any safety label.
• DO NOT cantilever loads.
• DO NOT move crane while loaded unless equipped with V-groove casters (AHA-2/4-V or AHA-2/4-Va) running on V-Track and hoist/trolley immobilized.

⚠ ADVERTENCIA
El uso inapropiado puede resultar en serias lesiones personales o muerte.
• NO arme, use o de mantenimiento a la grúa hasta que haya leído y entendido el manual completo.
• NO utilice cerca de electrodomésticos o cables.
• No exceda la capacidad estática. La carga aplicada a la grúa incluye el peso de todo lo que lleva: izar, carretilla, aparejo, etc.
• NO use si esta dañada o tiene mal funcionamiento. Asegúrese que todo este instalado apropiadamente y bien asegurado.
• NO operar el izar si la carga no está centrada sobre la carga.
• NO operar el izar si la cadena o cuerda esta enredada, doblada o dañada.
• NO operar si la cuerda del izar no está sentada en su surco.
• NO levante o columpie a personas.
• NO levante cargas por encima de personas.
• NO hacer movimientos manuales con otra potencia que no sea manual.
• Solo utilice en pavimento o superficies anivellados con cada rueda bloqueada perpendicularmente a las ruedas adyacentes.
• Immobilize todas las ruedas antes de cargar, p.ej. con cuñas.
• NO quitar ni ocultar ninguna etiqueta de seguridad.
• NO cargue vigas voladas.
• DO NOT move crane while loaded NO mueva la grúa al menos que este equipado con ruedas V-GROOVE (AHA-2/4-V or AHA-2/4-Va) corriendo en V-Track y con la carretilla y el izar immobilizados.

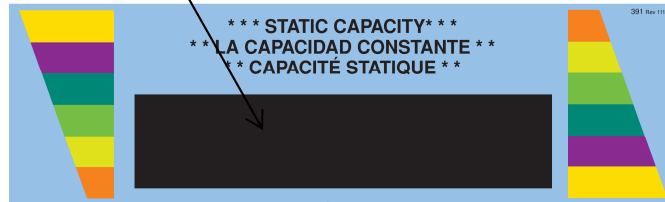

391, both sides



STATIC CAPACITY
LA CAPACIDAD
CONSTANTE
CAPACITÉ STATIQUE



532 • Revised 05/11

532, one leg
each end

500 LBS.
226 KGS.

600

6,000 LBS.
2,721 KGS.

420

2,000 LBS.
907 KGS.

395

OR

8,000 LBS.
3,628 KGS.

558

4,000 LBS.
1,814 KGS.

392

10,000 LBS.
4,535 KGS.

684

Label 1072 is to be applied to the outside of individual packaging

⚠ WARNING:
Reproductive Harm -
www.P65Warnings.ca.gov.

⚠ ADVERTENCIA:
Daño Reproductivo -
www.P65Warnings.ca.gov.

1072

⚠ WARNING: Cancer -
www.P65Warnings.ca.gov.

⚠ ADVERTENCIA: Cáncer -
www.P65Warnings.ca.gov.

FIXED HEIGHT STEEL GANTRY CRANE

12/20/2022