

FPG

300 / 136

POUNDS KILOGRAMS

562

1,000 / 453

POUNDS KILOGRAMS

560

OR

600 / 272

POUNDS KILOGRAMS

561

2,000 / 907

POUNDS KILOGRAMS

397

WARNING

Improper use could result in serious personal injuries or death.


- DO NOT assemble, use or maintain crane until you read & understand entire owner's manual.
- DO NOT use near overhead electric appliances or wires.
- DO NOT exceed static capacity.
- Load applied to crane includes weights of everything attached to it: hoist, trolley, rigging, etc.
- DO NOT use if damaged or malfunctioning. Confirm all pins properly installed and all fasteners are tight.
- DO NOT operate hoist unless centered above load.
- DO NOT operate hoist with twisted, kinked, or damaged chain or rope.
- DO NOT operate rope hoist unless rope properly seated in its groove.
- DO NOT lift or suspend people.
- DO NOT lift loads over people.
- DO NOT operate manual motions with other than manual power.
- ONLY use on level concrete or equal surface with each caster locked perpendicularly to adjacent caster.
- Immobilize all casters/wheels before loading, e.g. with chocks.
- DO NOT remove or obscure any safety label.
- DO NOT cantilever loads.
- DO NOT move crane while loaded unless equipped with V-groove casters (AHA-2/4-V or AHA-2/4-V4) running on V-Track and hoist/trolley immobilized.

ADVERTENCIA

El uso inapropiado puede resultar en serias lesiones personales o muerte.

- NO arme, use o de mantenimiento a la grúa hasta que haya leído y entendido el manual completo.
- NO utilice cerca de electrodomésticos o cables.
- No exceda la capacidad estática.
- La carga aplicada a la grúa incluye el peso de todo lo que lleva: izar, carretilla, aparejo, etc.
- NO use si está dañada o tiene mal funcionamiento. Asegurarse que todo este instalado apropiadamente y bien asegurada.
- NO operar el izar si la carga no está centrada sobre la carga.
- NO operar el izar si la cadena o cuerda esta enredada, doblada o dañada.
- NO operar si la cuerda del izar no está sentada en su surco.
- NO levante o cumples a personas.
- NO levante cargas por encima de personas.
- NO hacer movimientos manuales con otra potencia que no sea manual.
- Solo utilice en pavimento o superficies anivelados con cada rueda bloqueada perpendicularmente a las ruedas adyacente.
- Immobilize todas las ruedas antes de cargar, p.ej. con cuñas.
- NO quitar ni ocultar ninguna etiqueta de seguridad.
- NO cargue viga voladiza.
- DO NOT move crane while loaded.
- NO mueva la grúa al menos que este equipado con ruedas V-GROOVE (AHA-2/4-V or AHA-2/4-V4) corriendo en V-Track y con la carretilla y el izar immobilizados.

256, each leg

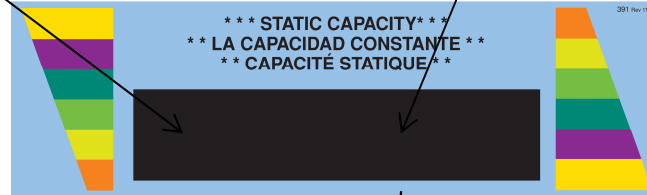

391, both sides



STATIC CAPACITY
LA CAPACIDAD
CONSTANTE
CAPACITÉ STATIQUE

532, each leg

532 • Revised 05/11

300 LBS.
136 KGS.

486

1,000 LBS.
453 KGS.

394

OR

600 LBS.
272 KGS.

393

2,000 LBS.
907 KGS.

395

Label 1072 is to be applied to the outside of individual packaging

WARNING:
Reproductive Harm -
www.P65Warnings.ca.gov.

ADVERTENCIA:
Daño Reproductivo -
www.P65Warnings.ca.gov.

WARNING: Cancer -
www.P65Warnings.ca.gov.

ADVERTENCIA: Cáncer -
www.P65Warnings.ca.gov.

PORTABLE GANTRY CRANE

4/9/2020